



15 kN BOTTOM PLATE FIXING

Insulated Slab

▶ SCREW BOLT ORANGE HEX HEAD M10 x 155mm

Mechanical Galvanised
Pack Size: 50pcs

BONUS IN EACH TUB

Includes
Square washer,
Impact Socket
& SDS Drill Bit



SCAN THE CODE



FOR MORE INFO

▶ Installation Guide




ECKO M10 x 155mm Screw Bolt (orange head) 90mm bottom plate anchor solution is BRANZ tested (ST18050-01-02).
For use with Firth's RibRaft HotEdge® insulation solution for concrete foundations.
**Please refer to www.firth.co.nz for installation guide.*



Step 1
Using a 10mm masonry drill bit, drill a hole to the required embedment + 10mm. Ensure that the minimum edge distance (from outside of insulation) of 58mm is adhered too.



Step 2
Clean dust and debris from hole.

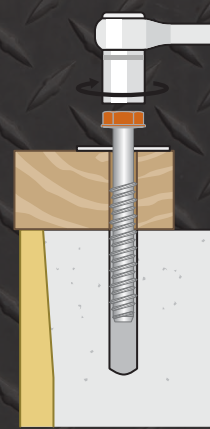

Step 3
Screw in anchor using torque wrench or impact wrench until flange head is firmly secured against washer. **DO NOT OVER-TIGHTEN.**